

Caution: Prevent liquid from getting into scale to damage electronics.

Resolution: 0.01mm/0.0005"
Battery: SR44 or SR44W



- 1-'OFF' button
- 2-'mm/in' button
- 3-'↑' button
- 4-'↓' button
- 5-Output
- 6-LCD display
- 7-'ON/O' button
- 8-Battery cover

1. Put battery into scale, the positive side of battery should face out.
2. Buttons
 - 'OFF' button: turn off display.
 - 'mm/in': for mm and inch conversion.
 - '↑' and '↓' button: press and hold these buttons and the reading will change.
 - 'ON/O' button: turn on display and set the reading to be zero.
3. One battery will last for one year of continuous use. If there is nothing on display or digits flash, battery voltage is too low, please replace battery. If digits do not change when buttons are pressed, take out battery and put it back after 1 minute. Remove battery if scale is not to be used for a long period of time.
4. Working temperature is 0-40°C. Do not put scale near strong magnetic field. Keep scale dry. Prevent liquid from getting into scale to damage electronics. Do not apply voltage on scale like engraving with electric pen.